


CADDYCUPHOLDER II TM

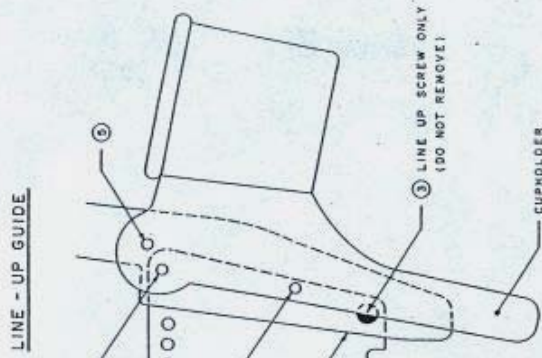

INSTRUCTIONS

- 1 REMOVE SCREW ②
- 2 INSTALL NEW 3/4" x 7/8" HEAD SCREW INTO EXISTING HOLE ②
- 3 USE LINE - UP GUIDE (SEE ABOVE)
- 4 CREATE NEW HOLE IN THE CADDY ARM AND DRILL THRU PLASTIC SEATBACK INTO THE METAL WING PLATE (AS SHOWN)

