



# ULTIMATE CADDY™

# INSTALLATION GUIDE

STEP 1

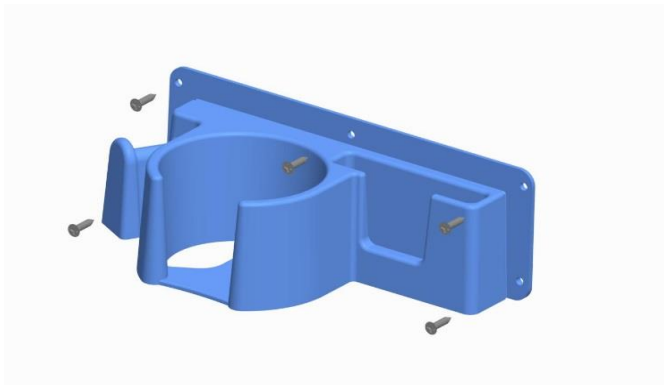

STEP 2

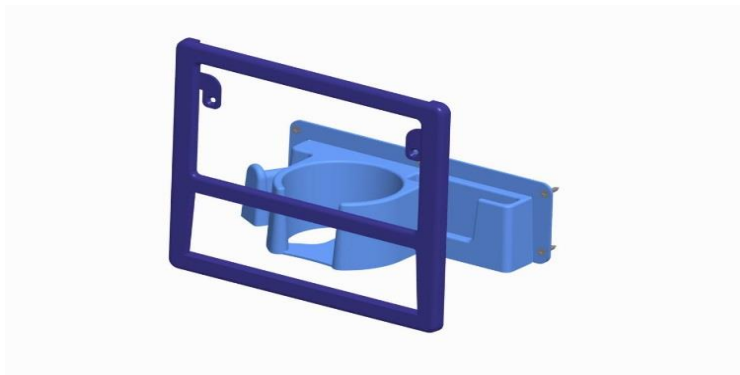

STEP 3



STEP 4



**Hardware recommendation: Flat head #8 screws or bolts**  
***If using the cosmetic frame, simply slide into place until the snap lock engages***